



Installation:

Note * this equipment must be installed by an authorized professional technician.

1. Install the main unit inside the vehicle away from moving parts and in a place where it is not insible.
2. The LED indicator must be hidden and not visible.
3. The emergy button must be hidden.
4. The cable with red/black coloring must be connected to the terminal 86 at the relay and terminal 85 to the positive charge together with terminal 30 and terminal 87A must be connected to the destiny cable.
5. The cable with black/white coloring must connected to terminal 86 at the relay and terminal 85 must be connected to the original cut together with terminal 30 and terminal 87A must be connected to the destiny cable.

261#-1

ANTI-ROBBERY DEVICE

User's Manual



261#-1说明书文件100*140MM, 单张对折

EG-028

Product: progressive double stage immobilizer

This immobilizer that protects your automobile from being stolen when your car is parked or when you are forcefully removed from your vehicle. EG-028 permits your vehicle to be safe even while you are away from your car. You can elect, upon installation, automatic vehicle shut off at 1.5 minutes, or 3 minutes after exiting your vehicle. EG-028 is an electronic system that recognized the owner of the vehicle with a UNIQUE ability to protect against intrusion by not allowing the engine to be turned on. An additional function is the PROGRESSIVE CUT (2) which assures that your vehicle cannot be started with a simple wire bridge. You will be able to select, during installation, from 1.5 minutes FIRST STAGE or 3 minutes SECOND STAGE for the activation of alarm system, as well as, the ability to program up to 2 transmitters for each system. We provide the system with a switch that has an option for valet parking and emergency shutdown. Also included, is an LED LIGHT indicator that shows you the status of your vehicle.

WARNING: It is recommended that the LED LIGHT indicator be placed inconspicuously in order to prevent alarm on/off detection by an intruder.

LED LIGHT Indicator Instructions:

LED LIGHT	FLASHES	STATUS
Red/Green	Alternative Flashes	While engine is on
Red	Flashes	First stage activated
Red	Constant	Second stage Activated
Green	Constant for 2 to 4 seconds	Signal transmitted by the remote. (signal recognized)
Green	Constant	Learning code mode
None	OFF	System Off

Operation of Your Equipment

Before getting into your vehicle, turn on the transmitter. The LED will turn on for four seconds to confirm that there is enough power for good signal reception and show normal vehicle function. If the vehicle does not start, turn off the system by pressing the valet button 5 times. This permits the system to recognize you as the owner, and allows you to turn on your engine. Your vehicle will react normally to this emergency set-up. If you are forced to exit your automobile **DO NOT DO ANYTHING, THE EG-028 WILL DO IT FOR YOU**. Your automatic vehicle shutoff at 1.5 minutes (first stage), or 3 minutes (second stage) is not compromised if you change locations within your vehicle.

To temporarily de-activate your system:

Press emergency button five times. Follow the same previous steps to turn the system back on.

How to program a new transmitter to your EG-028

Alarm System:

First, temporarily de-activate your system. Repeat last step. Keep pressing the emergency button until the green light flashes once, and then push any button on your transmitter. These steps will allow you to program up to two transmitters at a time. This should not delay more than 2 seconds for each transmitter. Once programming is finished just turn your system EG-028 System ON. Repeat the first steps.

Caution:

1. Do not use the transmitter if it is flashing. This means it is out of battery.
2. This equipment must be installed by an authorized professional technician.
3. Do not hit the transmitter or expose it to heat, water, fire, or extremely hot conditions.
4. This transmitter does not interfere with any other electronic devices.